



*Note: If PIC16F25K50 is installed
C5 must be installed and
servo 4 cannot be used.

Servo Wiring:
1 - Servo pulse
2 - +5V
3 - Ground

*Note: Use either LCD or servos - not both.

CC 2013		Rev.: 3		Mod.: 1	
		Sirius microSystems (Common Hardware Robotics Platform)			
Title: CHRP		Date: 12-11-04		Sheet 1 of 1	
Drawn by: J. Rampelt		Checked by:		Filename: CHRP301	